


TYPICAL ARRANGEMENT OF DUCT ENTRANCES.
DUCTS MAY ENTER THE PULL BOX AT ANY ANGLE
OR LOCATION AT THE SPECIFIED DEPTH AND
SHOULD BE APPROXIMATELY 6" ABOVE THE FLOOR
OF THE PULL BOX.

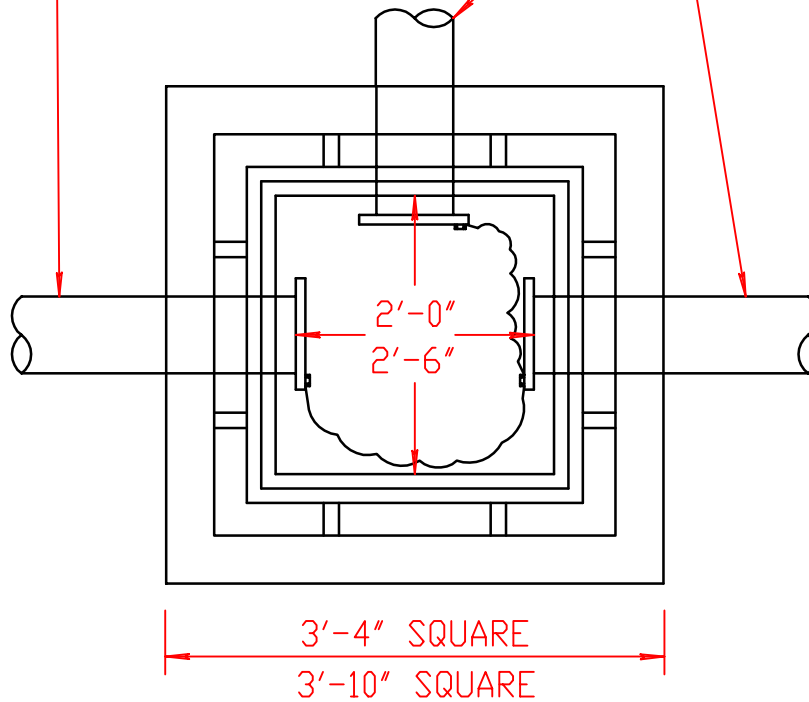

PLAN

NOTE

1. THE BUSHING SHALL BE INSULATED AND HAVE A GROUND LUG FOR #6 COPPER WIRE. ALL CONDUITS SHALL BE WIRED/GROUNDED TOGETHER WITH THE BARE #6 COPPER WIRE.
2. FOR ADDITIONAL INFORMATION, REFER TO THE GENERAL NOTES ON FIGURE 134.

PULL BOX DETAIL

NOT TO SCALE

7/14/00

REVISED